Measuring Total Kick Panel Heights for Optimal Glass Sightlines.

Option #1: Top Kick Panel
Measure from the slab top to the insert frame.

Option #2: Top Kick Panel
Measure from the slab top to the top embossment.

Option #3: Bottom Kick Panel
Measure from the slab bottom to the insert frame.

Option #4: Bottom Kick Panel
Measure from the slab bottom to the embossment.

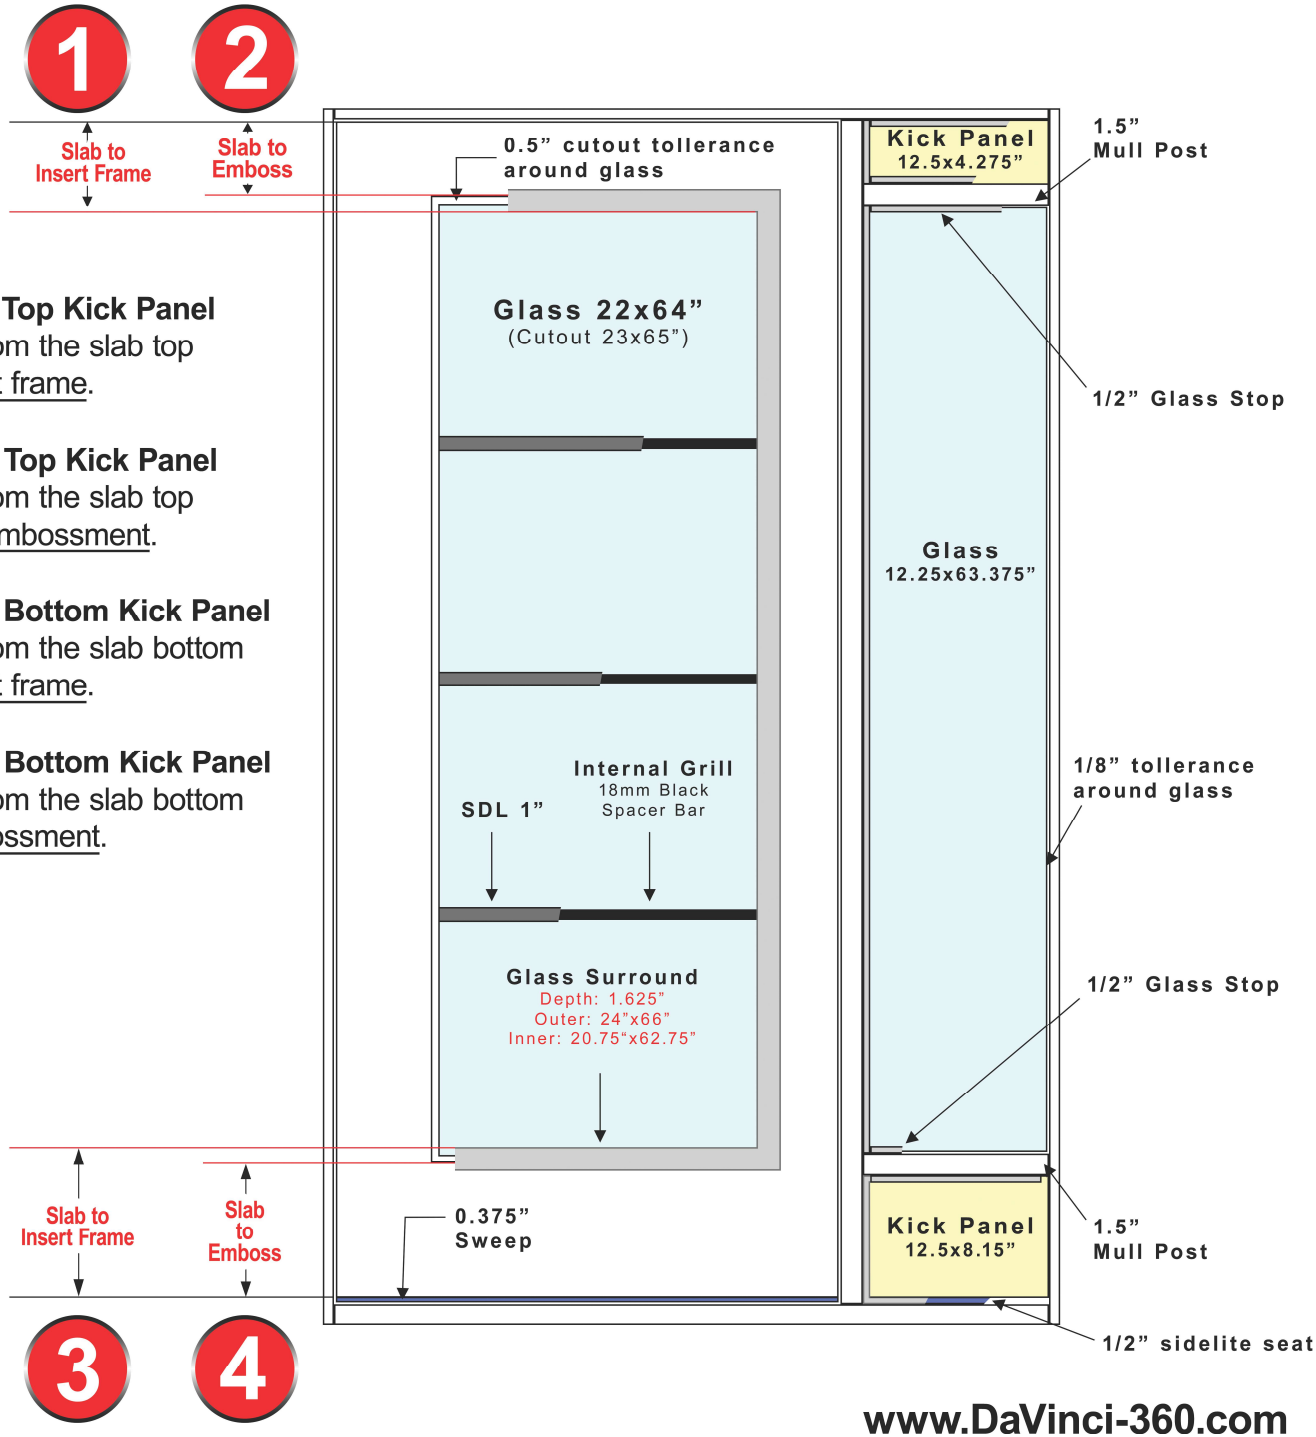

www.DaVinci-360.com